



# LUXE™ 6200m Connection via WLAN

## Quick Reference Guide

This *Quick Reference Guide* describes how to quickly connect to a Luxe 6200m via WLAN (wireless local area network).

### AUDIENCE

This guide is intended for technical personnel responsible for developing applications or using the Luxe 6200m.

### REQUIREMENTS

Ensure you have the following:

- PC with Internet access

### ASSUMPTIONS

This guide assumes that you have already installed your Luxe 6200m within your specific environment using the provided cables.

### TIP

To access the Desktop Manager screen, **Press & Hold** down the **3 Bar** physical key until it beeps. Then quickly press the **3 Bar** key twice.

### OVERVIEW

The Luxe terminals support connectivity **Wizards** that assist in the quick configuration of Luxe devices under some common conditions, such as (but not limited to):

- Configuring to an external ECR (Electronic Cash Register)
- Setting up a semi-integrated terminal to respond to an external ECR

The Wizards display screens in a specific sequence that prompts the user to enter the necessary information to configure the terminal. Additionally, the Luxe terminal also contains generic device configuration screens that allow you to access each terminal configuration page directly. This *How To Guide* uses the direct device configuration page(s).



Figure 1

### WLAN CONNECTION

To connect the Luxe 6200m terminal via WLAN:

- Step 1:** From the terminal, press the POWER key (above GREEN key) to power ON the device (see Figure 1).
- Step 2:** From the Desktop menu on the Luxe terminal, select the **Setup** icon to display the main Setup menu (see Figure 2).
- Step 3:** Select the **System Config** icon to display the **System Config** Menu (see Figure 3).
- Step 4:** Select the **Network** icon to display the Network Configuration pages (see Figure 4).
- Step 5:** Select the appropriate protocol for your environment (either HTTP or HTTPS) and then select **Next** button. Toggling OFF indicates HTTP and ON indicates HTTPS (see Figure 5). **NOTE:** For development purposes, recommend selecting the HTTP protocol.
- Step 6:** Select the available Network Types (Wired or WiFi). For this *How To Guide*, select **WiFi** (see Figure 6).
- NOTE:** If the terminal has already connected to a WiFi network, the display screen will show the network's SSID with an option to disconnect. If not connected, the display screen will show a scrollable list of available networks currently in range. Either select one or select the **Enter SSID** button (see Figures 7 & 8). Touch the **Text Entry** box and enter your SSID information.
- Step 7:** When prompted for the WiFi password, touch the **Text Entry** box. The terminal displays an alphanumeric keyboard for you to enter your password, then select **Continue** button (see Figure 9).
- Step 8:** Select the appropriate Network Configuration (**DHCP** or **Static** buttons). If a connection is made, the terminal displays "Successfully Enabled" message. Select **Continue** button to complete setup.

### TECHNICAL SUPPORT

Questions about the Luxe SDK can be directed to your Customer Support Specialist or call 1.877.497.3726. You can also direct any questions, comments or issues by visiting the Equinox Developers Support (EDS) portal (<https://developer.equinoxpayments.com>).

**NOTE:** Registration is required to access the EDS portal (see [Request New Account](#)).



Figure 2



Figure 3

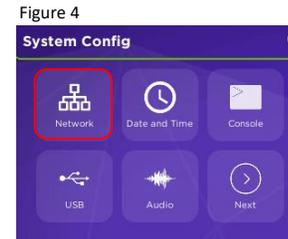


Figure 4

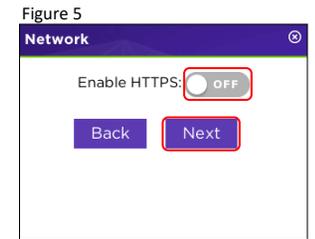


Figure 5

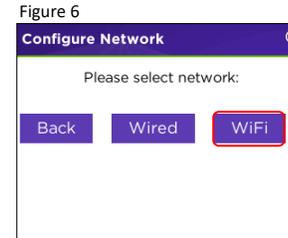


Figure 6

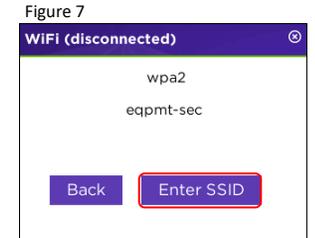


Figure 7

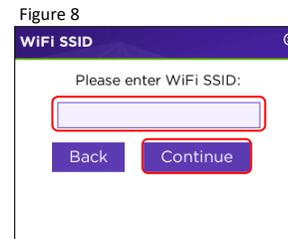


Figure 8



Figure 9